

Bluetooth Serial Adaptor

User's Manual



Wireless Solutions in Your Hand

1. Introduction

Thank you for purchasing our Bluetooth serial adaptor. The adaptor eliminates your conventional RS232 serial cables, providing an easy-to-use, invisible connection with superior freedom of movement. This tiny adaptor allows any device with a standard 9-pin serial port to communicate wirelessly. You can communicate with another *Bluetooth* serial adaptor or other *Bluetooth*-enabled devices such as a laptop computer, PDA or mobile phone.

1.1. Features

- Supports Bluetooth Serial Port Profile and Generic Access Profile
- No need of external host and software
- Easy of installation and use
- Supports configuration of the local device
- Easy of maintenance
- Supports up to 100 meters (line of sight)

1.2. Package

- Bluetooth serial adaptor
- Antenna
- DB9 male to female converter
- USB cable for power supply
- User's manual

2. Specifications

2.1. General


Specification	Description
Baud Rate	Supports 4.8/9.6/19.2/38.4/57.6/115.2/230.4 Kbps
Coverage	Up to 100 m
Connection	Point-to-point (pico net)
Signal	TxD, RxD, GND, CTS, and RTS
RS-232 Interface	D_SUB 9-pin female
Standard	Bluetooth specification version 2.0+EDR
Frequency	2.400 to 2.4835 GHz
Hopping	1,600/sec, 1MHz channel space
Modulation	GFSK-1 Mbps, DQPSK-2 Mbps, and 8-DPSK-3 Mbps
Tx. Power	Max. 18 dBm (Class 1)
Rx. Sensitivity	-86 dBm typical
Antenna	Chip antenna or SMA female + external antenna (optional)

-2-

Specification	Description
Antenna Gain	Chip antenna max. 1 to 2 dBi
Power Supply	+5 to +6 V DC
Current Consumption	Max. 90 mA
Operation Temperature	-20°C to +75°C
Dimensions	35 mm (W) x 65 mm (D) x 16 mm (H)

2.2. RS232 Interface

2.2.1. Pin-out



2.2.2. Signals

Pin	DTE Signal	DTE to DCE Direction	DCE to DTE Direction	Description
1	CD	Input	Output	Not connected
2	RxD	Input	Output	Received data
3	TxD	Output	Input	Transmitted data
4	DTR	Output	Input	Not connected
5	GND	N/A	N/A	Signal ground
6	DSR	Input	Output	Not connected
7	RTS	Output	Input	Request to send
8	CTS	Input	Output	Clear to send
9	Vcc	Input	Input	Power supply

Remarks: The default hardware configuration is for using CTS/RTS. If you want to use DSR/DTR, please contact us.

2.3. Factory Settings


The factory settings of COM port are as follows:

- Baud rate: 19200 bps
- Data bit: 8
- Parity: none
- Stop bit: 1
- Flow control: H/W or none
- Others: Please refer to section 4.3 AT Command Set.

3. Installation

3.1. Hardware Structure

The figure below is an outline of the adaptor.

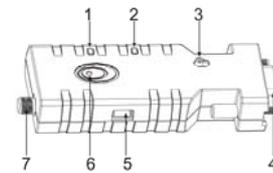

1 Power LED	2 Link LED	3 Slide switch	4 RS232 connector
5 Mini USB Connector	6 Reset button	7 Antenna connector	

3.1.1. Reset Button

By pressing the Reset button, you can:

- Disconnect and reconnect a wireless connection (a short press).
- Restore the factory COM port settings (over three seconds' press).

3.1.2. Slide Switch

The slide switch can swap TXD/RXD and CTS/RTS signals.

By switching, you can set the adaptor either as a DTE (towards antenna connector) or a DCE (towards RS232 connector).

3.1.3. Power Supply

The adaptor can be powered via:

- An AC/DC converter (output power: +5 to +6 V DC/300 mA)
- A USB cable
- Pin 9 of the D SUB 9-pin connector

3.1.4. LED Status

The following is LED status information.

Status	Description
Power LED off	No power supply.
Power LED on	Firmware is running OK.
Link LED off	No pairing established.
Link LED fast (0.1 sec) blinking	Pairing (slave or master mode).
Link LED fast (0.3 sec) blinking	Discoverable and waiting for a connection (slave mode).
Link LED slow (0.9 sec) blinking	Inquiring (master mode).
Link LED very slow (1.2 sec) blinking	Connecting (master mode).
Link LED steadily on	Connection established.

3.2. Installation Procedure

- Step 1: If provided with an external antenna, assemble it to the adaptor body.
- Step 2: Plug the adaptor into the COM port of device.
- Step 3: Adjust the slide switch, depending on whether the device is a DTE or DCE.
- Step 4: Power the adaptor on.
- Step 5: Configure the adaptor if necessary.

-4-

4. Usage

You can reprogram the default settings on the adaptor using HyperTerminal.

4.1 HyperTerminal Settings

- Bits per second: 19200 bps (baud rate)
- Data bit: 8
- Parity: None
- Stop bit: 1
- Flow control: H/W

4.2 Configuration

4.2.1 Configuration Start-up

- Step 1: Plug the adaptor into a COM port of PC.
 Step 2: Power the adaptor on.
 Step 3: Create a HyperTerminal file.
 Step 4: On the interface of the new HyperTerminal file, click Properties button.
 Step 5: Select the COM port where the adaptor is attached to your PC and set the port properties as described in section 4.1 HyperTerminal Settings.
 Step 6: Input "A" in the file and then press <Enter>.
 If no echo, that is, nothing is displayed when you input "A", it indicates that the baud rate is incorrect. Ensure that the baud rate is 19200bps.
 Step 7: Input "AT", and then press <Enter>. "OK" is displayed.
 If necessary, reprogram the configuration of adaptor using AT commands.
 For related commands, please refer to section 4.3 AT Command Set.

4.2.2 Master Role Configuration

You can use "ATRO" to change the adaptor to the master role. When the adaptor is in the master role, you can use "ATO1" to manually set up a connection and "ATF?" to find the device you want to connect.

4.3. AT Command Set

The following is the AT command set for the local adaptor in the command mode (that is, the local adaptor is in the disconnection state). All the commands and parameters are case insensitive.

Command	Description
+++	When the device is in Data mode, it can be forced back into Command mode while maintaining the connection to the remote device. The sequence characters should be with 1000ms guard time.
O	This command is used to enable/disable auto-connection feature in master role. By the way, it is used to online switch from command mode to data mode. Note, it will cause a reboot when ATO0 or ATO1 take effect.
O	Online switch from Command mode to Data mode.
O0 (Default)	Automatically connect the adaptor to a device specified by "ATD= xxxxxxxxxxxx" or any available device if "ATD=xxxxxxxxxxxx" is not executed.
O1	Disable auto-connection feature. After it is executed, you need to execute "ATA" to manually connect a remote device.
O?	Inquire the current setting.
A	This command is used to establish a connection. It is available only when the adaptor is in the manual master role.
A	Connect the adaptor to a specified Bluetooth device. It is available only when "ATD=xxxxxxxxxxxx" is executed.
A1-A8	Connect the adaptor to a device in the neighborhood found through "ATF?"
B	This command is used to display the Bluetooth address of the local adaptor.
B?	Inquire the Bluetooth address of the local adaptor.
C	This command enable or disable flow control signals (CTS/RTS) of the UART port. Note, the setting is not affected by ATZ0 but will cause a reboot
C0	Disable flow control.
C1 (Default)	Enable flow control.
C?	Inquire the current setting
D	For security purpose, this command is used to specify a unique remote Bluetooth serial adaptor to be connected. In the master role, the adaptor pairs and connects with the designated remote slave address. In the slave mode, this command is a filter condition to accept the inquiry of the master device.
D=xxxxxxxxxxxx	"xxxxxxxxxxxx" is a string of 12 hexadecimal digits.
D0	Restore the status in which the adaptor can connect with any remote address.
D?	Inquire the designated address that can be paired and connected.
E	This command is used to specify whether the adaptor echoes characters received from the UART back to the Host in command mode.
E0	Characters received from the UART will not echo back to the Host.
E1 (Default)	Characters received from the UART will echo back to the Host.
E?	Inquire the current setting.

Command	Description
F	This command is used to search for any Bluetooth device in the neighborhood within one minute. If any device is found, its name and address will be listed. The search ends with a message "Inquiry ends. xx device(s) found." This command is available only when the adaptor is in the manual master role.
F?	Inquire Bluetooth devices in the neighborhood, listing 8 devices the maximum
H	This command is used to drop the connection either master or slave role. And it is used to specify whether the adaptor can be discovered by remote master devices. Note, it will cause a reboot when ATH0 or ATH1 take effect.
H	Drop current connection in Online Command mode .
H0	The adaptor enters the undiscoverable mode. If a pair has been made, the original connection can be resumed. But other remote master device cannot discover this adaptor.
H1 (default)	The adaptor enters the discoverable mode.
H?	Inquire the current setting.
I	This command is used to inquire the information.
I0	Inquire the version codes.
I1	List all current setting value.
I2	Inquire RSSI in Online Command mode .
K	This command is used to specify one or two stop bits of COM port.
K0(default)	One stop bit.
K1	Two stop bits.
K?	Inquire the current setting.
L	This command is used to specify the baud rate of COM port.
L*	1200 bps
L#	2400 bps
L0	4800 bps
L1	9600 bps
L2 (default)	19200 bps
L3	38400 bps
L4	57600 bps
L5	115200 bps
L6	230.4 Kbps
L?	Inquire the current baud rate.
M	This command is used to specify parity bit setting of COM port.
M0(default)	None parity bit.

Command	Description
M1	Odd parity.
M2	Even Even parity
M?	Inquire the current setting.
N	This command is used to specify a name for the adaptor. You can specify a friendly name using 0 to 9, A to Z, a to z, space and -, which are all valid characters. Note that "first space or -, last space or - isn't permitted". The default name is "Serial Adaptor".
N=xxxxxx	"xxxxxx" is a character string with a maximal length of 16.
N?	Inquire the name of the local adaptor.
P	This command is used to specify a PIN. The default PIN is "1234". Paired adaptors should have a same PIN.
P=xxxxxx	"xxxx" is a 4-8-digit string.
P0	Cancel authentication by PIN.
P?	Inquire the current PIN.
Q	The command is used to decide whether result messages are prompted when AT commands are executed. The result messages are: OK/ERROR for command execution, or CONNECT/DISCONNECT for connection status.
Q0 (default)	Prompt result messages.
Q1	Not prompt result messages.
Q?	Inquire the current setting.
R	This command is used to specify whether the adaptor is in the master or slave role. If the device role is changed, the adaptor will reboot and all paired records will be cleared.
R0	Set the adaptor to the master role.
R1 (default)	Set the adaptor to the slave role.
R?	Inquire the current role of the adaptor.
X	Disable/Enable escape sequence "+++"
X0	Disable escape sequence.
X1 (default)	Enable escape sequence.
X?	Inquire the current setting.
Z	This command is used to restore the default settings and reboot.
Z0	Restore the default settings.